
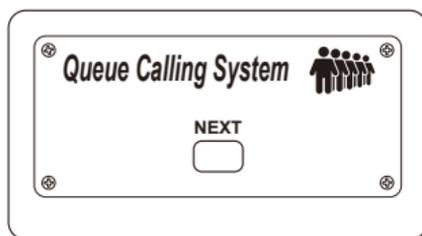
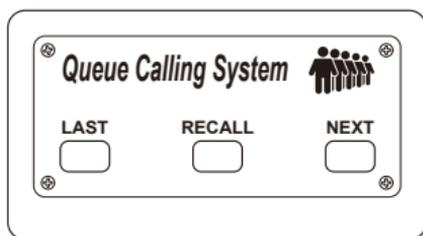


K-Q13

Display Receiver

User Manual

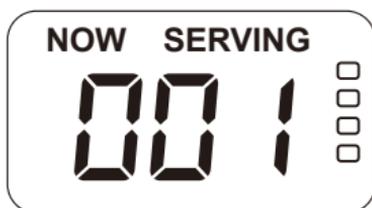

This system can be work when you received them. You can press start from NEXT button, then display will show 001. When turn off display, number will start count from 001 again. If it doesn't work, you need re-connect. First setting F9-E1 then F1-E1 function.

- ✳ : Setting key, Confirm key, Move digit key
- ↩ : Exit system
- ↑ : Up key, Increase number key
- ↓ : Down key, Decrease number key

F1 Storage Mode

E1 Register Transmitters

1. Press [✳] key 2 seconds, screen show F1.
2. Press [✳] key, screen show E1.
3. Press [✳] to confirm, screen show 001, "1" is flashing, and press [↑], [↓], [✳] key to choose the number you want to save (000-999).
4. Press any key from transmitter, you will hear a voice (success) and number skip to next one, then the number registered successfully.
5. Press [↩] it will exit to "E1", press [↩] again to exit setting state.

NOTE: *If you hear a voice (failure), it means number has been used.*

If only buy one button, you just register 001 and exit setting, press button then the number will start from 001 to call.

If buy two button or more, you need register 001. 002. 003..... and exit setting, press any button to call, the number will start from 001. Then press any button, number will goes next one.

E2 Register Counter Number

1. Press [✳] key 2 seconds, screen show F1.
2. Press [✳] key, screen show E1, press [↓] to E2.

3. Press [✳] to confirm, screen show 1, "1" is flashing, and press [↑], [↓], [✳] key to choose the number you want to save. (You can choose the number from 0-9, A-E)
4. Press any key on the transmitter, you will hear a voice (success) and number skip to next number, then the transmitter is registered successfully.
5. Press [↩] it will exit to "E2", press [↩] again to exit setting state.

F2 Deletion Mode

E1 Delete Transmitters

1. Press [✳] key 2 seconds, screen show F1.
2. Press [↓] key to show F2, press [✳] to show E1.
3. Press [✳] to confirm, screen show 001, "1" is flashing, and press [↑], [↓], [✳] key to choose the number you want to delete.
4. Long press [✳] key, you will hear a voice (success), means number is deleted successfully.
5. Press [↩] it will exit to "E1", press [↩] again to exit setting state.
 - [✳] key can move digits. [↑] and [↓] can add or decrease number.

NOTE: *You can adjust to 000 if you want to delete ALL number in one time.*

E2 Delete Counter Number

1. Press [✳] key 2 seconds, screen show F1
2. Press [↓] key, screen show F2, press [✳] screen show E1, press [↓] to show E2
3. Press [✳] to confirm, screen show 1, "1" is flashing, and press [↑], [↓] key to choose the number you want to delete. (You can choose the number from 0-9, A-E)
4. Long press [✳] key, you will hear a voice (success), means number is deleted successfully.
5. Press [↩] it will exit to "E2", press [↩] again to exit setting state.

F3 Display Setting

E1 Display Mode

1. Press [*] key 2 seconds, screen show F1.
2. Press [↓] key two times to show F3, press [*] screen show E1.
3. Press [*] to show 1 or 2, and then choose the one you need.
 - “1” means Live mode--means when No.1 No.2 No.3 call in turn, screen show 003 002 001. Newest call number shows on the top of screen.
 - “2” means the Queue mode--means when No.1 No.2 No.3 call in turn, screen show 001 002 003. The easiest call number shows on the top of screen.
4. Press [↵] it will exit to “E1”, then it is s successful.
5. Press [↵] again to exit setting state

E2 Storage Number (Default:99)

1. Press [*] key 2 seconds, screen show F1.
2. Press [↓] key two times to show F3, press [*] screen show E1, press [↓] to show E2.
3. Press [*] to confirm, press [↑], [↓] to choose the number from 01-99.
4. Press [↵] it will exit to “E2”, then it is s successful.
5. Press [↵] again to exit setting state.

F4 Logout Setting (Remove Timing Setting)

1. Press [*] key 2 seconds, screen show F1
2. Press [↓] key three times to show F4, press [*] key, show 00(or other number).
3. Press [↑], [↓] to choose the number from 00-99
 - “00” means the number will keep staying on screen until be canceled. (Default)
 - “01-99” means the display time of last number on the screen. If you choose 50, it means last number can keep 50 seconds on screen. When time is end, this number will be deleted automatically.
4. Press [↵] it will exit to “F4”, then it is s successful.

5. Press [↵] again to exit setting state

F5 Cycle Mode

1. Press [*] key 2 seconds, screen show F1
2. Press [↓] key four times, screen show F5, press [*] screen show 00(or other number)
3. Press [↑], [↓] to choose the number from 00-99
 - “00” means the number will not cycle. (Default)
 - “01-99” means the cycling time of all calling number. For example, if you choose 10 seconds, it means the number will cycle one time for each 10 seconds.
4. Press [↵] it will exit to “F5”, then it is s successful.
5. Press [↵] again to exit setting state

F6 Voice Setting

E1 Voice Mode--“2” is default

1. Press [*] key 2 seconds, screen show F1
2. Press [↓] key five times, screen show F6, press [*] screen show E1
3. Press [*] to confirm, screen show 0(or other number)
4. Press [↑], [↓] to choose the number from 0-7
 - “0” means English pronunciation (number and service type)
Such as: “Number zero zero one CALL”
 - “1” means English pronunciation (number only)
Such as: “Number zero zero one ”
 - “2” means English pronunciation (eg.No.105: One hundred and five + service type)
 - “3” means English pronunciation (eg.No.105: One hundred and five)
 - “4” means Ding Dong voice alert
 - “5” means music alert 1
 - “6” means music alert 2
 - “7” means warning sound
5. Press [↵] it will exit to “E1”, then it is s successful.
6. Press [↵] again to exit setting state

E2 The times of Voice Announcements (Default:1 times)

1. Press [*] key 2 seconds, screen show F1
2. Press [↓] key five times to show F6, press [*] screen show E1, press [↓] to show E2
3. Press [*] to confirm, screen show 1(or other number)
4. Press [↑], [↓] to choose the number from 1 to 9. (The number means the times of speaking)
5. Press [↵] it will exit to “E2”, then it is s successful.
6. Press [↵] again to exit setting state

E3 Alert voice of cycling (Whether read the number when cycling mode)

1. Press [*] key 2 seconds, screen show F1
2. Press [↓] key five times, screen show F6, press [*] screen show E1, press [↓] two times to show E3
3. Press [*] to confirm, screen show “0” or “1”
4. Press [↑], [↓] to choose the number you need.
 - “0” means no voice alert when cycling. If choose “0” means, No.1 2 3 4 5 etc. will show circularly without ringing. (Default)
 - “1” means with alert for cycling. If choose “1” means, No.1 2 3 4 5 etc. will show circularly with ringing.
5. Press [↵] it will exit to “E3”, then it is s successful.
6. Press [↵] again to exit setting state

E4 Volume Setting (Default: 4)

1. Press [*] key 2 seconds, screen show F1
2. Press [↓] key five times, screen show F6, press [*] screen show E1, press [↓] three times to show E4
3. Press [*] to confirm, screen show “0” (or other number)
4. Press [↑], [↓] to choose the number you need.
 - “0” is mute. “4” is second level, 6 is highest volume.
5. Press [↵] it will exit to “E4”, then it is s successful.
6. Press [↵] again to exit setting state

E5 Brightness setting (Default: 7)

1. Press [*] key 2 seconds, screen show F1
2. Press [↓] key five times, screen show F6, press [*] screen

- show E1, press [↓] four times to show E5
3. Press [*] to confirm, screen show “0” (or other number)
4. Press [↑], [↓] to choose the number you need.
 - “1” is darkest. “7” is brightest.
5. Press [↵] it will exit to “E5”, then it is s successful.
6. Press [↵] again to exit setting state

E6 Operational sound navigation

0---OFF; 1---OPEN (Default)

E7 “Number”position

E8 To be developed

E9 To be developed

F7 Keyboard Setting (Default: OFF)

F8 Key Settings

E1 Single-key or Multi-key Setting

1---Single key; 2---Multi key

E2 Voice pairing

1. Press [*] key 2 seconds, screen show F1
 2. Press [↓] key seven times, screen show F8, press [*] screen show E1
 3. Press [↓] to show E2 and Press [*] to confirm, and you will see 00 (sound cancel)
 4. Press [↑], [↓] to choose the number (voice) you need.
 - For example, you need sound is “emergency” , you need choose 26, And press “emergency” key from button. Then you will hear “successful”.
 5. Press [↵] again to exit setting state
- When you press Emergency of button, you will hear a voice like this “XX number Emergency”

F9 *Restore factory setting*

1. Press [*] key 2 seconds, screen show F1
2. Press [↓] key 8 times, screen show F9, press [*] screen show E1
3. Long press [*] 2 seconds to confirm, you will hear a voice (success), then it is successful. And display exit setting state automatically.

FP *Choose the first number you like to start register*

1. Press [*] key 2 seconds, screen show F1
2. Press [↑], [↓] key to choose FP, press [*] and screen show 000 (3-digit number, first number can be letter A, b, C, d, E)
3. You can choose the number you need by [↑], [↓] or [*] key, such as A05
4. Press [↵] again to exit setting state, press the transmitter after, the number will be shown from A05 as a beginning.

Remark: *001 is a default beginning number, you can modify it into A05 or other number you need as a beginning.*

FU *Memory function when disconnect the power*

1. Press [*] key 2 seconds, screen show F1.
2. Press [↑], [↓] key to choose FU, press [*] and screen show 0 or 1.
3. Choose the number you need, then press [↵] to exit setting state.

“0” means the calling will be start from the first number which as a beginning.

For example: A05 is first number you choose to as a beginning, when you switch on the display and press the button to call, the number will start from A05.

“1” means the calling will be start from “last number +1” after cut off the power

For example: 105 is last number the counter worker call yesterday, the calling will start from 106 when counter worker calling today.